## **Configuring the Chassis Management Module (CMM)**

## **Prerequisites:**

- The Chassis Management Module (CMM) is connected to the network and the IP address for the CMM is known.
- Remote access to the CMM is established.
- Disable pop-up blockers on your browser.

## **Steps:**

Follow these steps to create a backup of the current configuration of the CMM:

- 1. Log in to the CMM web interface.
- 2. Select Configuration from the Mgt Module Management menu.
- 3. Click Backup Configuration to File.
- 4. Type a file name for the backup file. There is a choice to include a pass phrase with the file. This pass phrase is requested if the backup file is used to restore the configuration; if you select this option, be sure to remember the phrase you choose. You have to enter the pass phrase twice to confirm it.
- 5. Click Download Backup file to create the file and save it.
- The File Download window enables you to save the file on your local machine with a file type of \*.bkp.
- 7. To use this file in the future to restore the CMM to these current settings, click Restore Configuration from file on the Manage Configuration page.

On the Mgt. Module Management menu, there are additional options to configure the following items:

- User Accounts you can create and modify user accounts that will have access to the CMM.
- Firmware you can view and update CMM firmware levels.
- Security you can set security policies and configure security protocols like SSL and SSH.
- Network you can set the IPv4 and IPv6 settings for the CMM in addition to setting SNMP, DNS, SMTP, SLP, and other network settings.
- Configuration you can back up the current configuration, restore a previously saved configuration, or rerun the initial setup wizard.
- Properties you can control settings such as date and time or failover.
- License Key Management you can view and add license keys for additional functionality for IO Modules or the Chassis.
- Restart you can restart the CMM, restart and switch to the Standby Management Module, or restart the Standby Management Module.

- Reset to Defaults you can set the CMM configuration back to default values.
- File Management you can view or delete files that are stored on the CMM.