

Configuring a Power Systems compute node using the IBM Flex System Manager management node

Prerequisites:

- The Advanced System Management (ASM) interface is connected to the network and the IP address for the ASM is known.
- The ASM interface is managed by an IBM Flex System Manager management node.

Use Case:

1. Log in to the IBM Flex System Manager web interface.
2. Click Chassis Manager on the Welcome page.
3. Click the name of the chassis that contains the compute node that you want to configure. A graphical view of the chassis is displayed.
4. Click the compute node that you want to configure to display details for the compute node.
5. Click Actions and select Operations, then select Launch Advanced System Management (ASM).
6. Verify that the correct service processor IP address is displayed and click OK.
7. The Advanced System Management interface for the Power Systems compute node is displayed.